




Instructions of Milk Foamer

- Electricity Range: 230-240V~ 50Hz
- Power: 600-650W
- Heating element: flat heating disc
- Capacity: 100-250 ml cold milk
- Main wire: 0,75 metres
- Size: 173mm long, 120mm width, 185 mm height
-
-

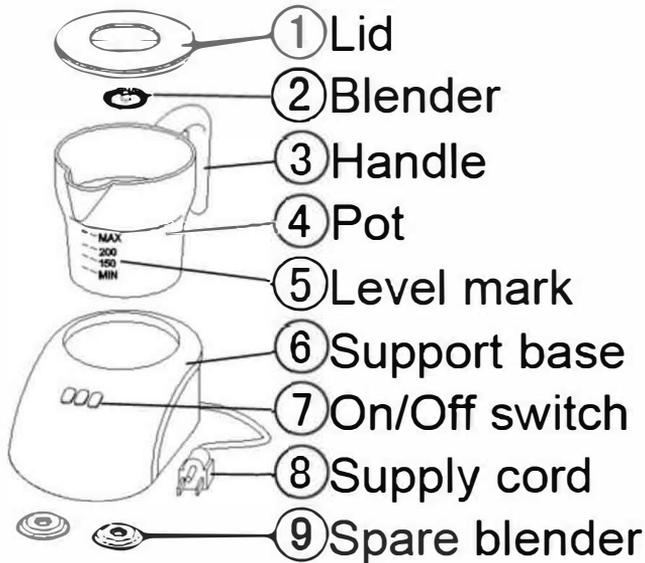

FOAM BLENDER

HOT MILK BLENDER

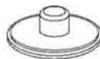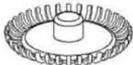

Safety warnings

- After having the packaging removed, check that the appliance is intact. If in doubt do not use the appliance and contact your sales agent.
- The parts of the packaging, plastic bags etc. must not be left within the reach of children as they are potential sources of danger.
- This appliance has been manufactured to make milk foam and chocolate only.
- This appliance is designed for and must only be used for house hold purposes. All other use is considered improper and as a result dangerous and voids the warranty.
- The manufacturer declines all liability for any damage deriving from improper, incorrect and unreasonable use of the appliance.
- In the event of faults or malfunctioning of the appliance, do not tamper with it. For any repairs, only contact service centres that are authorised by the manufacturer. Failure to observe the above warnings may compromise the safety of the appliance.

Cleaning & Maintenance

Before clean the inside after use, wait for the appliance to cool down.

When cleaning the inside, use a sponge or a soft brush together with normal washing up liquid. Do not use any solvents or abrasive detergents. Sharp or hard instruments or steel wool is strictly forbidden.

Take care! The heating element must not be scratched.

When cleaning outside of the appliance, just use a damp cloth. Keep attention not to wet any electrical parts.

Do not wash the appliance in the dishwasher.

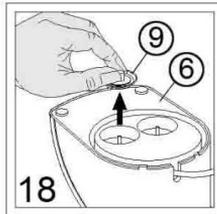
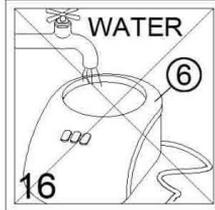


Fig 14 You can take out the blender and wash it under tap water.

Fig 15 You can pour the tap water into the pot to clean it.

Fig 16 Do NOT put the support base of the heater into water.

Fig 17 The support base of the heater can NOT be washed in water nor rinsed under tap water.

Fig 18 You can use the spare blender under the support base if you need it.

Problem solving

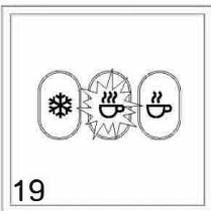


Fig 19 When the switch  is twinkling, that means the thermostat system of the appliance was been malfunction. At this time, you should cut off the electricity power and informed service dealer.

When the ON switch is pressed down, there is no light and it fails to work.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Check the power input: It is connected to the main socket in the wall and that there is electricity.

If it still fails to work. Contact a qualified service dealer.

The milk is not becoming a foam.

Check that the blender is correctly placed on the centre shaft.